

# TELEVISION INSTRUCTIONS

## PLEASE READ FIRST

Your AV system is controlled by an RTi touch screen smart remote controller, which seamlessly manages all switching and control functions. It should be the only remote you need to use. To avoid costly battery damage, *always* store the remote in its charging cradle when it's not in use.

The AV system has already been configured for optimum performance. Please do not attempt to adjust system settings, as this may adversely affect operation of the smart remote.

If the remote appears to be unresponsive, reset it by following the procedure on the next page. If this fails to restore functionality, please contact David Leisk Electronics.

## SYSTEM POWER

- Choose your desired source using the home screen button. The system will automatically turn on and switch to your selected source – note that this takes a few seconds.
- To turn the system OFF, press the red POWER OFF button (located above the MUTE button).
- To change the source, press the HOME button to return to the home page then choose your desired source.

## FOXTEL IQ

- First press the FOXTEL button on the home screen
- Change channel by using the channel up/down keys, or by keying in a channel number directly on the numeric keypad. To use the program guide, press GUIDE, then navigate using the arrow and OK keys.
- To instantly record press the REC button on the remote twice. To stop recording, press stop and follow the prompts.
- If you would like to record a second program, press the guide button, locate the second program you would like to record and press the record button on that program. Once that program is recording you can now watch a third by pressing select on the desired program
- You can instantly pause and rewind the current show by pressing the appropriate transport key.
- To view your recordings, press the PLANNER button on the touch screen. Follow the directions on the tv to view or delete your recordings.

## Apple TV

- To use Apple TV, press the APPLE TV button on the home screen
- Once the system has switched to Apple TV, use the MENU button, arrow keys and OK button to navigate the Apple TV menu.
- Apple TV uses a nested menu system
  - Each press of the OK key navigates one level further into the menu
  - Each press of the MENU key navigates one level back.
  - Press and hold MENU to return to the Apple TV home screen.
- Periodically Apple TV will ask to do a software update. Please apply these updates when you are prompted to ensure your unit remains fully functional.
- Gen 4 Apple TV includes SIRI – this functionality is available only on the factory supplied Apple TV remote control

## Blu-ray and DVD

- First press the DVD button on the home screen
- Press Eject on the player to open the tray, then load a disc and press the button again to close the tray
- Once the disc has loaded you can use the ARROW and OK keys to navigate the disc menu
- While the disc is playing you can use the transport keys (Play, Stop, Pause, Skip Forward, Skip Backward, Fast Forward, and Rewind) located under the arrow keys of the remote control.

# TELEVISION INSTRUCTIONS

**POWER ON / SOURCE**  
Press a source button to select the source you wish to use. The system will switch on and when ready the touch screen will display additional controls related to the selected source.

**HOME**  
Press this to return to the home screen if you wish to choose another source.

**Channel Up & Down buttons**  
Used with DTV & Foxtel

**GUIDE**  
Displays program list for Foxtel & DTV

**Transport Keys**  
Play, Pause, Rewind, Fast Forward, Stop & Rec. Used to operate DVD, NETFLIX, and Foxtel

**Numeric Keypad**  
Used with DTV & Foxtel

**POWER OFF**  
Used to turn the system OFF. This takes some time, and the remote will return to the home screen when the system is fully shut down.

**MUTE**  
Press to mute or unmute the sound.

**OK**  
Press to make a selection when using the arrow keys.

**Volume Up & Down**  
Used to adjust volume level

**Arrow Keys**  
Used with TV, DVD, NETFLIX & Foxtel

**MENU**  
Used with TV, DVD, NETFLIX & Foxtel

**RECORD**  
Press to record programs on Foxtel

**BACKLIGHT**  
Press to turn on Backlight

**To reset the remote** – press and hold the **OK** and **BACKLIGHT** buttons (shown below with green arrows) until the screen flashes and returns to the home screen. Typically, this takes up to 15 seconds. If the screen goes blank, place the remote into the charging cradle to complete the reset process.