

TELEVISION INSTRUCTIONS

PLEASE READ FIRST

Your AV system is controlled by a Savant touch screen smart remote controller, which seamlessly manages all switching and control functions. It should be the only remote you need to use. To avoid costly battery damage, *always* store the remote in its charging cradle when it's not in use.

The AV system has already been configured for optimum performance. Please do not attempt to adjust system settings, as this may adversely affect operation of the smart remote.

If you have multiple remotes in your house, each remote relates to a specific area or room. Some remotes may also offer control over lighting, blinds, and air-conditioning throughout the home.

SYSTEM POWER

- Choose your desired source using one of the icons on the "services" page of the touch screen. The system will automatically turn on and switch to your selected source – note that this takes a few seconds
- To turn the system OFF, briefly press the power button on the top end of the remote
- To change the source, press the back arrow on the lower left corner of the touch screen to return to the home page then choose your desired source

FOXTEL IQ

- First press the FOXTEL button on the services screen – the icon looks like a satellite dish
- Next, choose which Foxtel unit you'd like to watch – there are several available
- Change channel by using the channel up/down keys, or by keying in a channel number directly on the numeric keypad. Swipe right on the touch screen to access the numeric keypad
- To use the program guide, press GUIDE, then navigate using the arrow and OK keys
- To instantly record press the REC button on the remote twice. To stop recording, press stop and follow the prompts
- If you would like to record a second program, press the guide button, locate the second program you would like to record and press the record button on that program. Once that program is recording you can now watch a third by pressing select on the desired program
- You can instantly pause and rewind the current show by pressing the appropriate transport key

Apple TV

- To use Apple TV, press the APPLE TV button on the services screen – the icon is the Apple logo
- Next, choose which Apple TV unit you'd like to watch – there are two available
- Once the system has switched to Apple TV, use the MENU button, arrow keys and OK button to navigate the Apple TV menu.
- Apple TV uses a nested menu system
 - Each press of the OK key navigates one level further into the menu
 - Each press of the MENU key navigates one level back.
 - Press and hold MENU to return to the Apple TV home screen.
- Periodically Apple TV will ask to do a software update. Please apply these updates when you are prompted to ensure your unit remains fully functional.

Bluray and DVD

- First press the bluray button on the services screen,
- Next, choose from either the AU or US player depending on the region of the disc
- Press Eject on the appropriate player to open the tray, load the disc and then press the eject button again to close the tray
- Once the disc has loaded you can use the ARROW and OK keys to navigate the disc menu
- While the disc is playing you can use the transport keys (Play, Stop, Pause, Skip Forward, Skip Backward, Fast Forward, and Rewind) located under the arrow keys of the remote control.

TELEVISION INSTRUCTIONS

POWER BUTTON
Press the button briefly to switch off the room to which the remote corresponds
Press and hold the button to switch off the remote itself, do the same to restart it

BACK
Press this to return to the home screen if you wish to choose another function

Volume Up & Down
Used to adjust volume level

Arrow Keys
Used with TV, DVD, Apple TV & Foxtel

MUTE
Press to mute or unmute the sound.

EXIT
Press to exit a menu on TV, DVD, Apple TV & Foxtel

INFO
Used with TV, DVD & Foxtel

MENU
Used with TV, DVD, Apple TV & Foxtel

TOUCH SCREEN
From the **Services** page, swipe up or down to find the function you want, then tap the icon to choose it
Swipe right to access additional functions such as the numeric channel keypad
The red **Power Off** button appears in the lower right corner of the touch screen when viewing a source

Channel Up & Down buttons
Used with Digital TV & Foxtel

OK
Press to make a selection when using the arrow keys

MICROPHONE
Press and hold to use speech activation

GUIDE
Displays program list for Foxtel & DTV

Transport Keys
Rewind, Play, Fast Forward, Record, Pause, & Stop

SERVICES – more frequently used services will gradually move the top of the list

Foxtel	Apple TV	DTV	Bluray	Cameras	Lights	Blinds	Settings