

# Ness D16x ALARM SYSTEM INSTRUCTIONS

Your security alarm system has two modes of operation:

- **DISARMED** mode is for when you are home and moving about the house
- **AWAY** mode is for when you are away – the entire home is alarmed
- **HOME** (or NIGHT) mode is for night time – perimeter areas are armed but bedrooms are not

Some alarms may not feature a HOME mode – this depends on the configuration of the property and sensors that are fitted.


## Using the alarm

To ARM the alarm for AWAY mode, first make sure the house is secured and then press the ARM key on the keypad, followed by the E key.

Note that if any zone is not secured, you must enter your PIN code to FORCE ARM the alarm system.

To DISARM the alarm, enter your personal PIN code on the keypad, followed by the E key.

To ARM the alarm for HOME mode, press the HOME key on the keypad, followed by the E key.

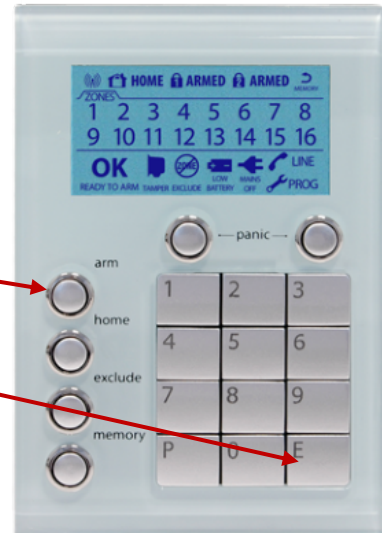

## Smoke Alarms

Smoke alarms are always active. If tripped, they will initially beep on the unit then the main alarm will sound a few seconds later. Enter your code to stop the main alarm, then press the button on the smoke detector to silence it.

## Security Control Room

Your alarm system is monitored by the SDS 24-hour Security Control room. In case your alarm is triggered, a control room operator will call your listed contacts to check if the alarm is legitimate or accidental. *The control room will ask for the alarm password.*

If none of the listed people can be contacted or the correct password is not provided, a security patrol will be sent to inspect the property and check for intruders. Note that a fee is applicable in this case.

If you accidentally trip the alarm, you can call the control room on **1300 760 796**.

## Maintenance

All 9V Smoke detector batteries should be replaced annually.

Every three years your alarm system should be checked, and operation of all sensors verified. At the same time, all 12V panel batteries should be replaced. Please contact DLE to arrange service.

## Advanced Features

Additional operations such as bypassing zones are also possible, please consult the original user manual for these procedures.